
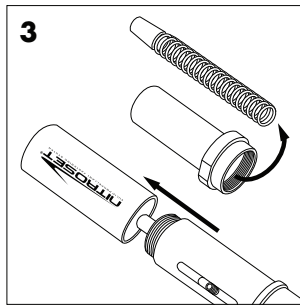


Remove Debris Cup from the Nosepiece.

Remove Nosepiece from the Reset Sleeve. Use the included wrenches for assistance as necessary.



Slide the Spacer off the threads of the Nosepiece as necessary.

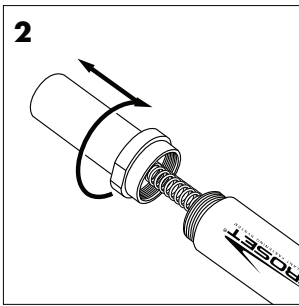

Remove the base from the tool.


Slide the Firing Spring off the tool. Note the Buffer is attached to the end of the Firing Spring (NTS101-9). Check condition of Firing Spring and Buffer.

Slide off the Outer Cover Sleeve.

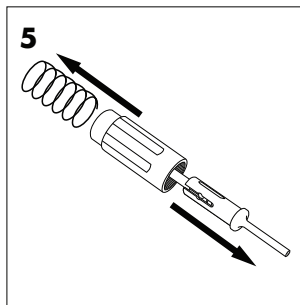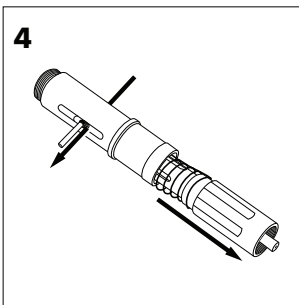



Depress the Reset Spring (NTS5X-11) to collapse the Reset Sleeve. This will loosen the Main Assembly Pin and allow it to be removed from the tool.

Slide the Main Firing Assembly from the main body of the tool.

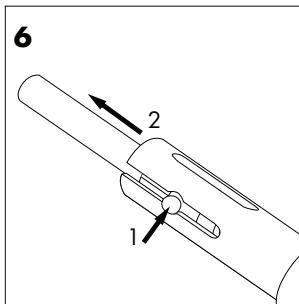

Depress the Trigger Ball to compress the Trigger Ball Spring and slide the Firing Pin Assembly from the Firing Pin Guide.

Keep pressure over the Trigger Ball to hold it in place while removing the assembly. Releasing the Trigger Ball may cause it to spring up.

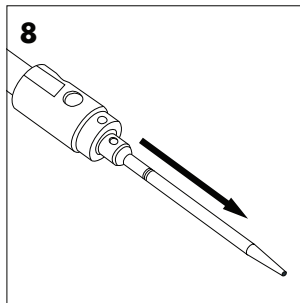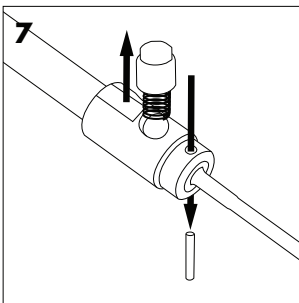

Once the Firing Pin Assembly has been removed from the Guide, slowly release the Trigger Ball and remove it from the Firing Pin Holder.

To remove the Firing Pin, use the provided firing pin punch and knock out the 1/8" Roll Pin.